



⚡-L1-N Mains voltage

Watch! Phase sensitive

- 1-3 Lockout input
- 4-5 Boiler enable
- 6-7 Direct hot water sensor
- 8-9 External influence 0-5V
- 10-11 Scm bus
- 12-13 PWM pump

Thermostat  
see option  
05S3000E02

or  
DHW  
sensor

External  
influence  
0 - 5V

- \*1 By connection remove jumper.
- \*2 Optional, for order see parts list.
- \*3 Along with option weather compensated regulation.

A	01-12-2003 R.L.	Wiring diagram Serie R30 type 35 - 45 	DAT. 18-11-2003 GET. R.L.	B3045E02	Page 1 - 2	
B	12-07-2004 R.L.		GE.C. E.H.			
C	24-11-2004 R.L.		A	B	C	D
D	13-01-2005 R.L.					

